

BEEPER

ALARM



BEEPER GSM 3WS
(ref : GSM 3WS)

Activate by phone 2 sirens and a starter cut-off on your vehicle

The BEEPER GSM 3WS can be installed alone or as a complement of your alarm system. As soon as this system is activated, the BEEPER GSM will alert you by sound beeps on your mobile or home phone. You will be able to react dialing 2 codes that will activate by phone the (internal & external) sirens or the starter cut-off.

Composition :

- » 1 transmitting power station (bundles 4 wires / easy installation)
- » 1 internal passenger cell micro-siren (11 dB) (discreet)
- » 1 external battery back-up siren (118 dB)
- » 1 starter cut-off (40 amperes relay)
- » 1 GSM windscreen self-adhesive antenna (discreet)



GSM antenna

Functions :

- . Unlimited range (according to the GSM web cover)
- . Universal (can be installed alone or as a complement of any alarm)
- . Simplified installation (7 wires to be connected)
- . Automatic activation (via the alarm system activation)
- . Alert on 1, 2 or 3 phone numbers
(The numbers must be recorded on the SIM card and can be modified as often as desired.)
- . Stopping of the alert on the 3 phone numbers via a code on your phone
- . Alert / Phone call via sound beeps (& visualisation on the LCD screen of your phone)
- . Activation of the 2 sirens (internal & external) via a phone call
- . Activation of a starter cut-off via a phone call
- . You can phone back your BEEPER GSM to know the events summary
(siren & activated or unactivated starter cut-off)

To use a BEEPER GSM, you need to have a dedicated GSM subscription. (The SIM card is integrated in the GSM power station.)

*The BEEPER GSM 3WS exists in kit form with a complete BEEPER ALARM alarm system :
-> SCREAM GSM package (Ref : SCR 3WS)*

Please ask your local dealer for any other information necessary.